

SL-PM Quick Instruction of WiFi Connection

SAMIL POWER CO., LTD.

Add: No.6, Xuefengshan Road, Suqian High-tech Industrial Development Zone,
Jiangsu Province, P.R.China. 223800

Tel : +86 (0) 527 88754666


Fax: +86 (0) 527 84453877

E-mail: service@samilpower.com

The Procedure of WiFi Setting

Step 1: Write down the WiFi SSID of inverter.


You can see the SSID by: Main Menu->Settings->Network->WiFi Message

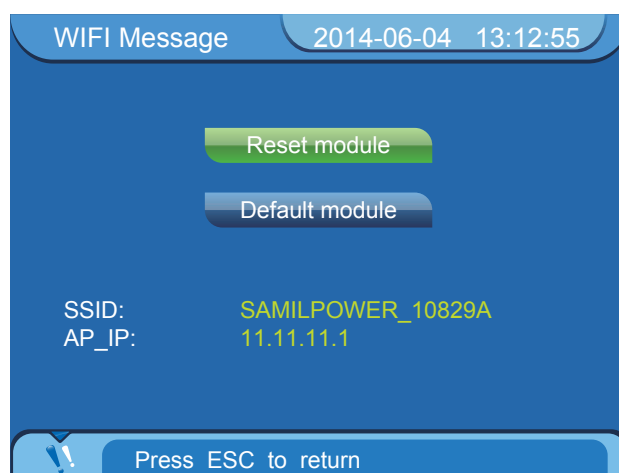


Step 2: Configure and set parameter of WiFi module.

Prepare a laptop with WiFi. Open the wireless network connection.


1. Choose the WiFi SSID: samilpower_10829A
2. Input the default password "samil123"
3. Input the website: http://11.11.11.1
4. Choose router

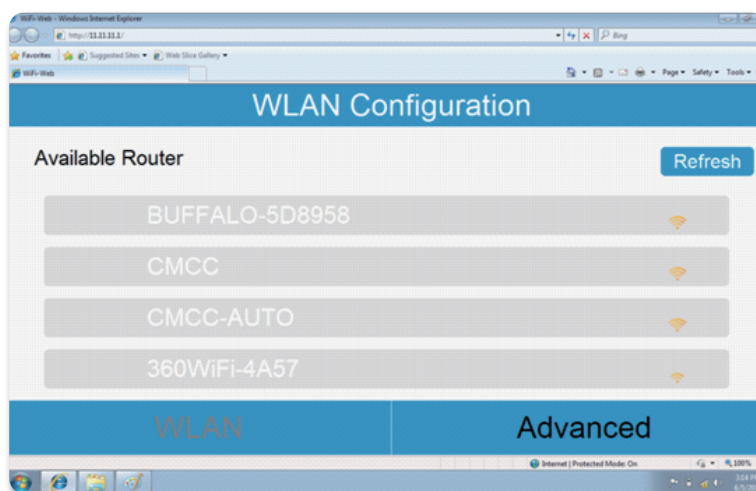


Input password and click OK.

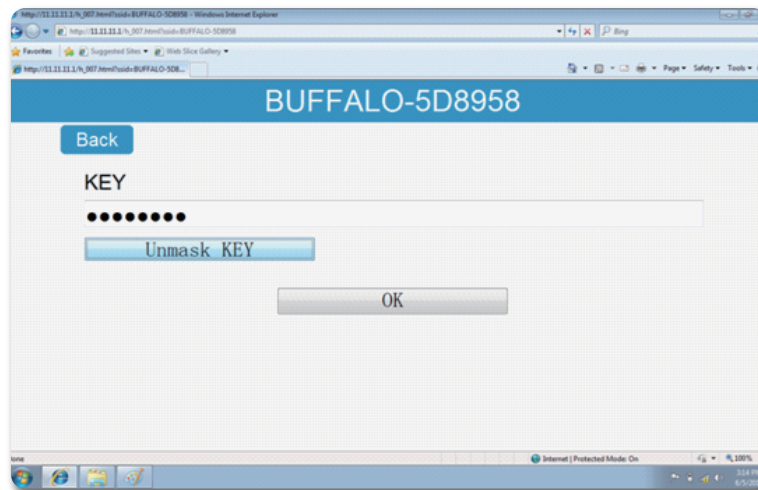


Wait 15 seconds and then repeat 1 to 3. if connection is established, you can see a tick on the right router.

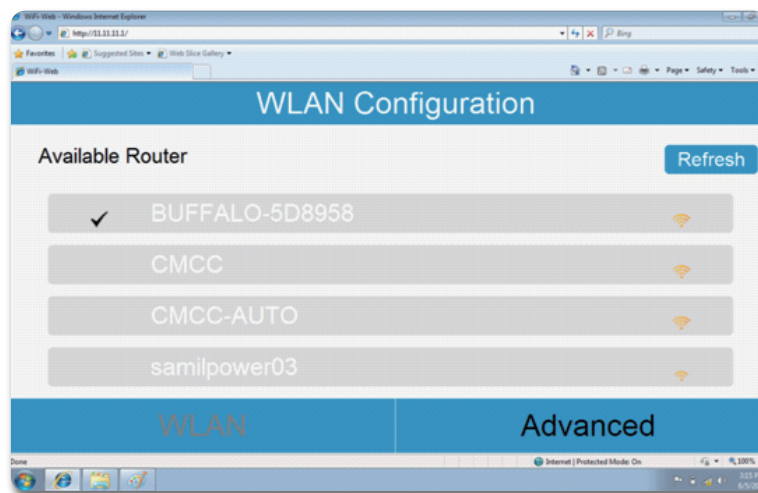


You can also change the module password. Choose 'Advanced' you can see the following screen.

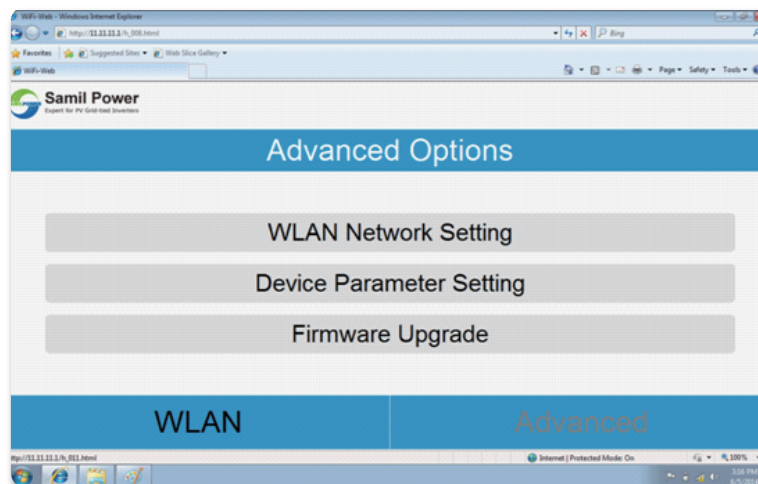

Choose Device Parameter Setting and change your password:

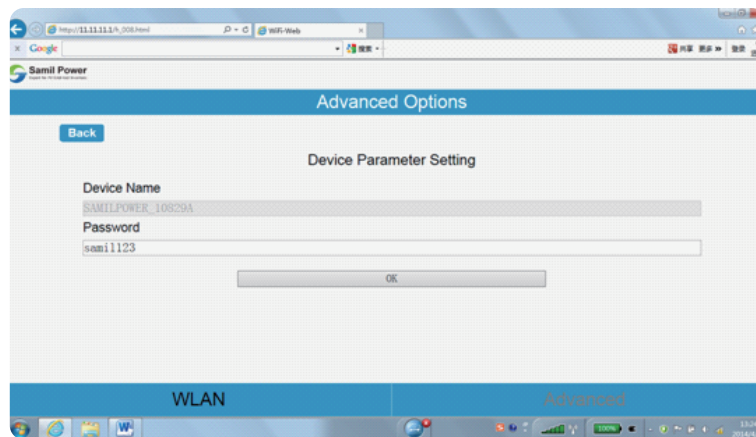

In WLAN Network Setting, you can connect to router manually.

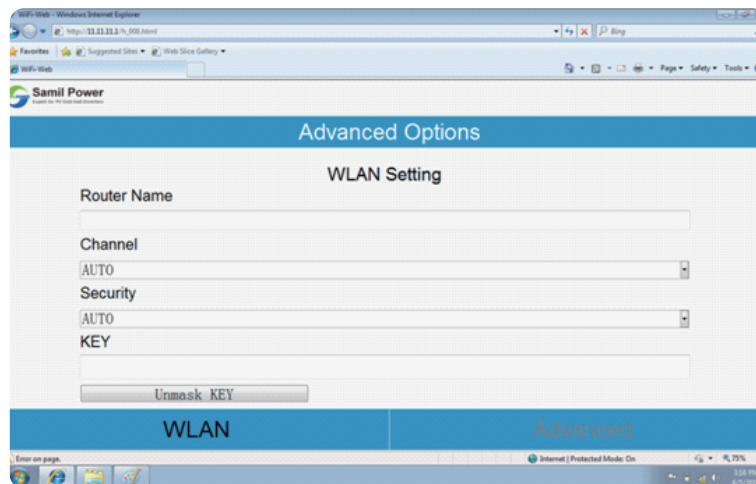

Factory setting:

choose 'Default module' on the screen, the WiFi setting will be reset to factory setting.

